

AUTOMATIC TIME SETTING

1. After the battery is installed the hands will fast forward to the 12:00 position and stop. The clock will remain stopped for up to 10 minutes while it searches for the time signal.
2. If the clock successfully receives the time signal it automatically sets the hands to the correct time. After setting, the clock periodically searches for the signal each day and adjusts the time accordingly so that the clock is always in synch with the WWVB time signal.
3. If the clock does not receive the time signal within the first 10 minutes it begins running normally from the 12:00 position. The clock will continue to periodically search for the time signal. Once the clock successfully receives the time signal it will fast forward the hands to the correct time.

POOR RECEPTION

If your clock does not automatically set itself within 24 hours after inserting the battery, it is probably due to poor reception. This is normally a temporary condition. Refer to the instructions for “COVERAGE AND PLACEMENT” and move the clock to another location for improved signal reception. Best signal reception occurs between 10:00 P.M. and 5:00 A.M.


MANUAL TIME SETTING

If moving the clock does not help or is not an option, you will need to manually set the time and allow the clock to automatically receive the time signal later, when reception conditions have improved. To manually set the time:

1. Press and hold the Manual Time Set Button (M SET). The second hand will stop and the hour and minute hands will do a fast advance.
2. Continue pressing the M SET button until the hour and minute hands get close to the current time. Then release the button and press it momentarily to advance the time in 1-minute increments to

the current time. Be sure that your momentary button presses are within 8 seconds of one another or the clock will exit the manual setting mode automatically.

3. Approximately 8 seconds after your last press of the M SET button, the clock starts running again.
4. The clock will now be reliably set to the correct time and will be ready to automatically pick up the time signal once reception

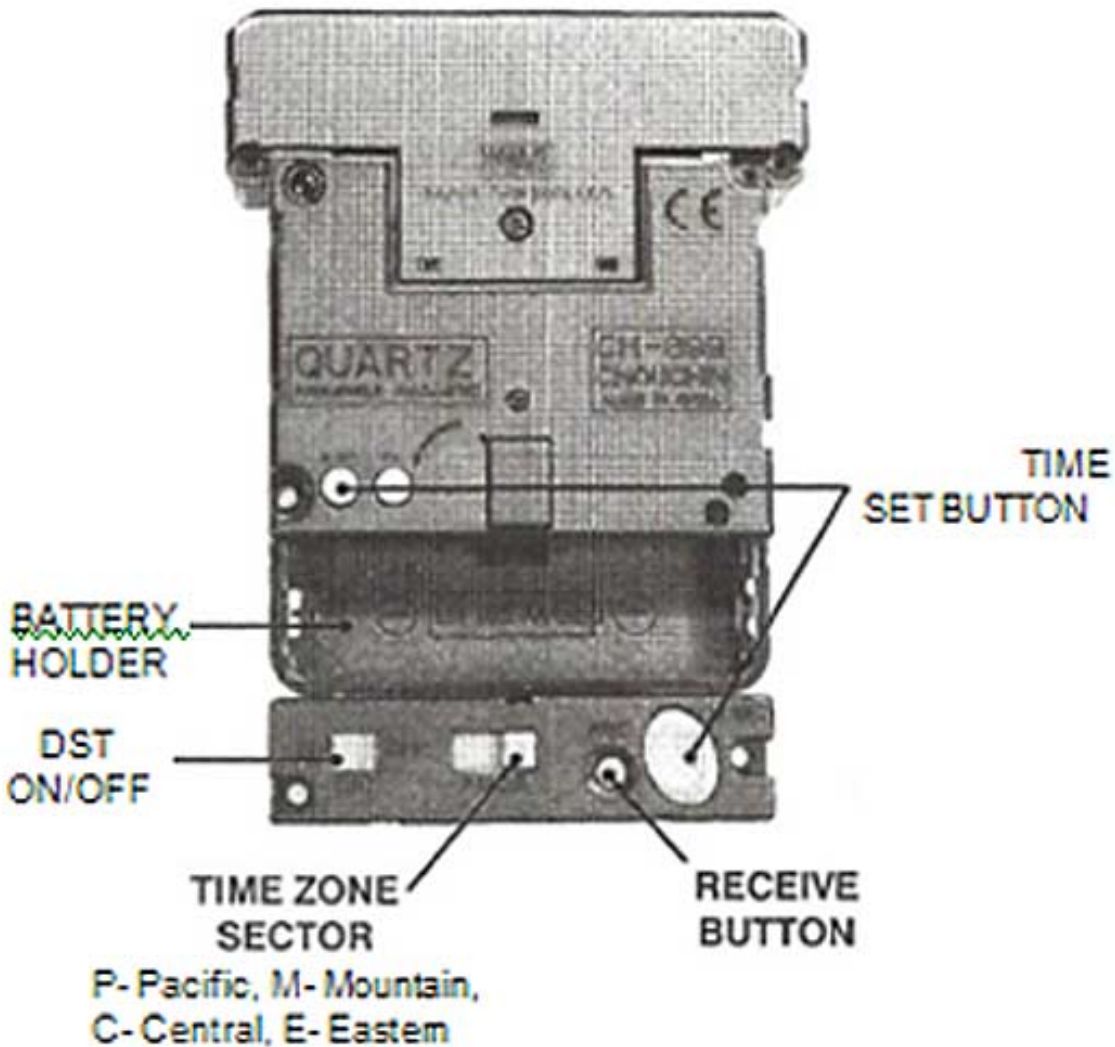

improves.

NOTE: Manual time setting is not intended for permanent settings of the clock to a time other than the correct time for the time zone selected.

Whether the time is set manually or automatically the clock periodically searches for the time signal each day and adjusts the time accordingly, based on the time zone selected.

MANUAL TIME SIGNAL SEARCH

1. While the clock is running, press and hold the Receive Button (REC) for at least 3 seconds. The clock stops and immediately begins searching for the time Signal.
2. If the clock receives the time signal, it fast-forwards past 12:00 to the correct time.
3. If the clock does not receive the time signal, it advances by the amount of time is spent searching and begins running normally.

HOWARD MILLER DISCLAIMS ANY LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM INACCURATE TIME DISPLAY.